

Coupler Support Sleeve Operational Manual

Used for large diameter internal bead removals

This accessory quickly attaches to the Bead Trimmer Handle Package to add strength to the torque tubes, preventing over stressing and destruction of the connectors, locking pins and torque tubes. Recommended size usage from 12" up to 24"



Coupler Support Sleeve with two Extended Locking Pins



**Connector and Torque Tube that has
been stressed and deformed**



Bent Locking Pins

Coupler Support Sleeve Assembly



A-line the Connector holes with the Torque Tube holes.



Slide the Coupler Support Sleeve over the Connector and Torque Tube, a-line holes and insert the Extended Locking Pin.



Slip second Torque Tube onto the Connector and insert second Extended Locking Pin.